 


RETRO KETTLE POPCORN MAKER™
RKP-630

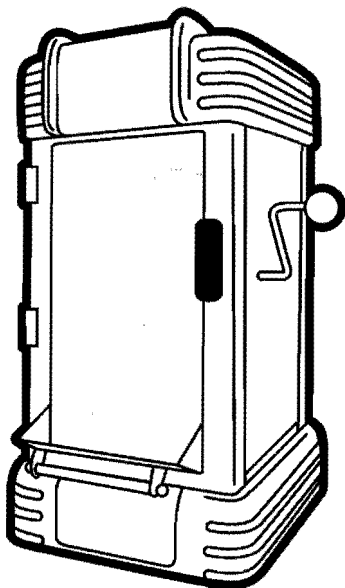

-
- **FOR HOUSEHOLD USE ONLY**
READ THESE INSTRUCTIONS BEFORE USING THIS UNIT!
SAVE THESE INSTRUCTIONS!
 - **UNIQUEMENT POUR UNE UTILISATION DOMESTIQUE**
VEUILLEZ LIRE CES INSTRUCTIONS AVANT L'UTILISATION
DE L'APPAREIL!
CONSERVEZ CES INSTRUCTIONS!
 - **SÓLO PARA USO DOMÉSTICO**
¡LEA ESTAS INSTRUCCIONES ANTES DE USAR EL
APARATO!
¡GUARDE ESTAS INSTRUCCIONES!

RETRO KETTLE POPCORN MAKER™

For Household Use Only

Read These Instructions Before Using This Unit!

Save These Instructions!

Appliance Specifications:	120 Volts
	60 Hz
	350 Watts

IMPORTANT PRECAUTIONS

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth on the unit.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER force kettle in or out of the brackets as this may misalign gears
And result in the unit not operating properly.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the
event the appliance ever malfunctions.
- I. DO NOT clean any parts of this unit in a dishwasher.
- J. Keep out of reach of children.
- K. This appliance is NOT A TOY.
- L. This appliance is not intended for use by young children or infirm
persons without supervision.
- M. Young children should be supervised to ensure that they do not play with
this appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. Keep door closed while operating. Do not touch the kettle while operating – it can get very HOT.
3. To protect against electrical shock, do not immerse cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts or cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair, or send back to company as stated in this booklet in the warranty.

IMPORTANT SAFEGUARDS

7. The appliance manufacturer does not recommend the use of accessory attachments. These may cause injuries.
8. DO NOT use outdoors.
9. Position this unit near outlet to prevent any hazard of injury due to tripping over cord.
10. Make sure kettle is properly attached to brackets before operating and motor plug is plugged into kettle.
11. DO NOT leave kettle motor running once popping has ceased.
12. Extreme caution must be used when moving this appliance.
13. DO NOT use the appliance for other than its intended use.
14. A unit that is plugged into an outlet should not be left unattended while in operation.
15. Check kettle for presence of foreign objects prior to use.
16. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
17. Longer detachable power supply cords can be used if care is exercised in their use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit into a polarized outlet only one way.

FEATURES

This retro style kettle popcorn unit makes hot, fresh, delicious popcorn just like the movie theatres! It features a large stainless steel kettle with a built in stirring system and pops up to 1 quart of popcorn per batch.

Your RETRO KETTLE POPCORN MAKER™ features a window and a warming light. A measuring spoon for oil and a measuring cup for popcorn kernels is included so that every batch of popcorn pops perfectly. Your unit has a kernel catcher and is easy to use and easy to clean!

The RETRO KETTLE POPCORN MAKER™ is only designed in appearance to look like the retro style of the 1950s, however, it is a technologically advanced kettle popcorn maker that makes hot, fresh, theater style popcorn every time – anytime!

USING YOUR RETRO KETTLE POPCORN MAKER™

 
The RETRO KETTLE POPCORN MAKER™ is easy to use, just follow these simple instructions.

AFTER TAKING THE UNIT OUT OF THE BOX

- Before first use, wipe the inside of the unit clean with a non-abrasive moist sponge, towel or cloth and then wipe with a non-abrasive towel to dry.
- Wipe clean the inside of the kettle and be sure it is properly placed in the brackets before starting. Plug in kettle plug.

USING YOUR RETRO KETTLE POPCORN MAKER™ (Continued)

- Your RETRO KETTLE POPCORN MAKER™ needs little assembly. The Stainless Steel kettle needs to be securely inserted in the support brackets hanging from the top inside the unit. The side of the kettle with the inverted threads needs to be on the right side of the machine. This is the same side with the small round hole in the glass. This is where the crank handle will enter to screw in and connect to the kettle. (See page 3, Illustration A for positioning of crank handle.)
- Now you are ready to enjoy fresh, hot and tasty theater style popcorn from your RETRO KETTLE POPCORN MAKER™.

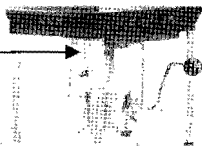


USING YOUR RETRO KETTLE POPCORN MAKER™

1. First, find a flat surface near an electrical outlet before starting. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.)

Gather your popcorn making supplies; popcorn, seasonings, bowls or bags for holding the popcorn, cooking oil, measuring cup and spoon. (Measuring cup and spoon are included with your unit).

 2. Plug in your unit in the OFF position.
3. Make sure kettle is properly secured in support brackets.
4. Make sure kettle motor is plugged in.
5. Turn unit ON by flipping the switch on the top of the machine. (See Illustration A below for location of switches). Allow the unit to run 3-5 minutes to heat up kettle. Turn unit OFF.

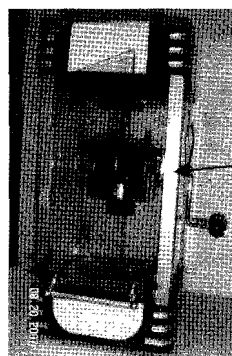

On/Off and light switches

AA

Kettle

BB

Crank handle connects to kettle
from outside

 
CC

A


6. By using the oil-measuring spoon supplied with your RETRO KETTLE POPCORN MAKER™, add 2 teaspoons of your favorite popcorn cooking oil to the kettle.
7. Add ¼ cup of popcorn kernels to the kettle.

RETRO KETLE POPCORN MAKER™
RKP-SERIES

BREAKDOWN

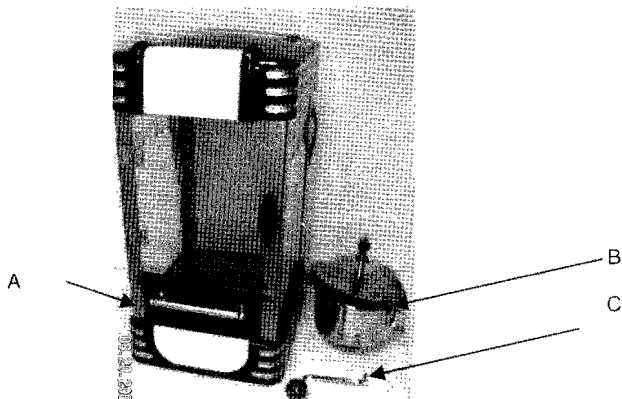

 - A. Popcorn Maker with pull-open front for easy scooping of popcorn.
- B. Kettle
- C. Crank Handle

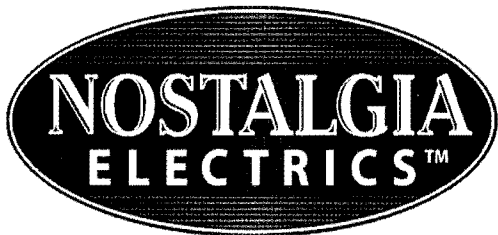

The Helman Group, Ltd
1621 Beacon Place
Oxnard, CA 93033
(805) 487-7772 phone
(805) 487-9975 fax

Visit Us Online at
www.helmangroup.com
©2006 The Helman Group, Ltd.

U.S. Design Patent# D552,405S